

模式切换	按 键		⑨ 舞蹈运控		
零力矩	L2 + Y	★	L 功夫 (↑5m)		R1 + B ▲
① 阻尼	L2 + B	★	L 舞蹈 1 (→1m)		R1 + SELECT ★
② 锁定站立	L2 + 上	★	L 舞蹈 2 (↑1m, ←1m)		R1 + 上 ★
⑤ 躺 -> 站	L2 + X	★	L 舞蹈 3 (↗3m)		R1 + 上 ★
④ 落座	L2 + 右	★	▲ L 机械舞 3 (↑6m, ←3m)		R1 + 上 ★
⑥ 蹲 <-> 站	L2 + A	▲	L 截拳道 (3m*3m)		R2 + 上 ★
⑩ 自适应起身	R1 + R2 + X	★	L 扭扭舞 (3m*3m)		R2 + 右 ★
运控切换	按 键		L 机械舞 1 (↖2m, →2m)		L1 + X ★
③ 走跑运控	R2 + A	▲	L 机械舞 4 (↑4m, ←2m)		L1 + Y ★
L 低速 / 高速	R2 + ( 上 / 下 )	★	L 芭蕾 (↖6m, →3m)		L1 + A ★
⑦ 常规运控	R1 + X (单腰) / Y (三腰)	▲	<p>I. ★ 代表短按一次生效, ▲ 代表长按 2 秒生效</p> <p>II. 运控状态下长按 5 秒 ①, 设备进入阻尼保护状态</p> <p>III. 躺倒开机: 开机 - ① - ⑩ - 演示 - ⑤ - 关机</p> <p>IV. 蹲姿开机: 开机 - ① - ⑥ - 演示 - ⑥ - 关机</p> <p>V. 座椅开机 (推荐): 开机 - ① - ② - ③ - 演示 - ④ - 关机</p> <p>Tips: ② - ③过程需要人扶直站立</p> <p>VI. 舞蹈运控下, 双击 start 可紧急中断舞蹈</p> <p>VII. 括号内注明了舞蹈所需的活动空间</p>		
L 低速 / 高速	双击 L2 / L1	★			
交互功能	按 键				
L 握手	SELECT + A	★			
L 高举挥手	SELECT + Y	★			
L 胸前挥手	双击 Y	★			
L 飞吻	双击 X	★			
L 鼓掌	双击 A	★			
⑧ 越障运控	R2 + B	▲			
L 踏步 / 站立	双击 START	★			

Mode	Button		⑨ Dance Mode	R1 + B	▲
Zero Moment	L2 + Y	★	└ Kung Fu (↑5m)	R1 + SELECT	★
① Damping	L2 + B	★	└ Dance 1 (→1m)	R1 + ↑	★
② Locked Standing	L2 + ⬇	★	└ Dance 2 (↑1m, ←1m)	R1 + ⬇	★
⑤ Lie -> Stand	L2 + X	★	└ Dance 3 (↗3m)	R1 + ⬆	★
④ Seated Mode	L2 + ⬆	▲	└ Popping3 (↑6m, ←3m)	R1 + ⬆	★
⑥ Squat <-> Stand	L2 + A	▲	└ Jeet Kune Do (3m*3m)	R2 + ⬆	★
Adapt Rise	R1 + R2 + X	★	└ Twist (3m*3m)	R2 + ⬆	★
Motion Control Switching	Button		└ Popping1 (↖2m, →2m)	L1 + X	★
③ Running Mode	R2 + A	▲	└ Popping4 (↑4m, ←2m)	L1 + Y	★
└ Low/High Speed	R2 + (⬆ / ⬇)	★	└ Ballet (↖6m, →3m)	L1 + A	★
⑦ Regular Mode	R1 + X (1-DoF Waist) / Y (3-DoF Waist)	▲	<p>I. ★ a single short press to activate  ▲ a long press for 2 seconds to activate</p> <p>II. In motion control mode, long-pressing button ① for 5 seconds enter damping protection mode</p> <p>III. Lie down and turn on: Turn On - ① - ⑩ - Demo - ⑥ - Turn off</p> <p>IV. Squat position turn on: Turn On - ① - ⑥ - Demo - ⑥ - Turn off</p> <p>V. Seat power on (recommended): Turn On - ① - ② - ③ - Demo - ④ - Turn off</p> <p>Tips: ② and ③ require manual assistance to help the robot stand upright</p> <p>VI. In Dance Mode, double-click Start to perform an emergency stop</p> <p>VII. Parentheses show the required dance space</p>		
└ Low/High Speed	Double Click L2 / L1	★			
Interactonal	Button				
└ Handshake	SELECT + A	★			
└ Wave Hand	SELECT + Y	★			
└ Face Wave	Double Click Y	★			
└ Right Kiss	Double Click X	★			
└ Clap	Double Click A	★			
⑧ Climb Mode	R2 + B	▲			
└ Stepping/Standing	Double Click START	★			