

模式切换	按 键	交互功能	按 键
零力矩	L2 + Y	★ L 握手	SELECT + A
① 阻尼	L2 + B	★ L 高举挥手	SELECT + Y
② 锁定站立	L2 + 上	★ L 双手打 X	SELECT + X
⑤ 躺 -> 站	L2 + X	★ L 胸前挥手	双击 Y
④ 落座	L2 + 右	▲ L 飞吻	双击 X
⑥ 蹲 <-> 站	L2 + A	▲ L 鼓掌	双击 A
运控切换	按 键	L 右手平举	双击 B
③ 走跑运控	R2 + A	▲ L 举左手	双击 上
L 低速 / 高速	R2 + (上 / 下)	★ L 举右手	双击 右
⑦ 常规运控	R1 + X (单腰) / Y (三腰)	▲ L 举双手	双击 上
L 低速 / 高速	双击 L2 / L1	★ ⑧ 越障运控	R2 + B
⑨ 舞蹈运控	R1 + B	▲ L 踏步 / 站立	双击 START
L 功夫	R1 + SELECT	I. ★ 代表短按一次生效, ▲ 代表长按 2 秒生效 II. 运控状态下长按 5 秒 ①, 设备进入阻尼保护状态 III. 躺倒开机: 开机 - ① - ⑤ - 演示 - ⑥ - 关机 IV. 蹲姿开机: 开机 - ① - ⑥ - 演示 - ⑥ - 关机 V. 座椅开机 (推荐): 开机 - ① - ② - ③ - 演示 - ④ - 关机 Tips: ② - ③过程需要人扶直站立	★
L 舞蹈 1	R1 + 上		★
L 舞蹈 2	R1 + 右		★
L 舞蹈 3	R1 + 左		★
L 翻滚起身	R1 + 下		★

Mode	Button	Interactive	Button
Zero Moment	L2 + Y	★ L Handshake	SELECT + A
① Damping	L2 + B	★ L Wave Hand	SELECT + Y
② Locked Standing	L2 +	★ L Reject	SELECT + X
⑤ Lie -> Stand	L2 + X	★ L Face Wave	Double Click Y
④ Seated Mode	L2 +	▲ L Right Kiss	Double Click X
⑥ Squat <-> Stand	L2 + A	▲ L Clap	Double Click A
Motion Control Switching	Button	L Right Raise	Double Click B
③ Running Mode	R2 + A	▲ L Flex Left	Double Click
L Low/High Speed	R2 + (/)	★ L Flex Right	Double Click
Regular Mode	R1 + X (1-DoF Waist) / Y (3-DoF Waist)	▲ L Flex Both	Double Click
L Low/High Speed	Double Click L2 / L1	★ ⑧ Climb Mode	R2 + B
⑨ Dance Mode	R1 + B	▲ L Stepping/Standing	Double Click START
L Kung Fu	R1 + SELECT	★	
L Dance 1	R1 +	★	
L Dance 2	R1 +	★	
L Dance 3	R1 +	★	
L Roll Up	R1 +	★	

I. ★ a single short press to activate ▲ a long press for 2 seconds to activate
 II. In motion control mode, long-pressing button ① for 5 seconds enter damping protection mode
 III. Lie down and turn on: Turn On - ① - ⑤ - Demo - ⑥ - Turn off
 IV. Squat position turn on: Turn On - ① - ⑥ - Demo - ⑥ - Turn off
 V. Seat power on (recommended): Turn On - ① - ② - ③ - Demo - ④ - Turn off
 Tips: ② and ③ require manual assistance to help the robot stand upright