

模式切换	按 键	⑨ 舞蹈运控	R1 + B	▲	
零力矩	L2 + Y	★ L 查尔斯顿舞1 (→1m)	R1 + 上	★	
① 阻尼	L2 + B	★ L 查尔斯顿舞2 (↑1m, ←1m)	R1 + 右	★	
② 锁定站立	L2 + 上	★ L 查尔斯顿舞3 (↗3m)	R1 + 左	★	
⑤ 躺->站	L2 + X	★ L 机械舞3 (↑6m, ←3m)	R1 + 下	★	
④ 落座	L2 + 右	▲ L 截拳道 (3m*3m)	R2 + 上	★	
⑥ 蹲<->站	L2 + A	▲ L 扭扭舞 (3m*3m)	R2 + 右	★	
⑩ 自适应起身	R1 + R2 + X	★ L 机械舞4 (↑4m, ←2m)	L1 + Y	★	
运控切换	按 键	L 芭蕾 (↘6m, →3m)	L1 + A	★	
③ 走跑运控	R2 + A	▲ L 传统舞 (↘2m, →4m)	L1 + B	★	
L 低速/高速	R2 + (上 / 下)	★ L 律动 (3m*3m)	L1 + 上	★	
⑦ 常规运控	R1 + X (单腿) / Y (三腿)	▲ L 机械舞5 (3m*3m)	L1 + 右	★	
L 低速/高速	双击 L2 / L1	★ L 热身 (3m*3m)	L1 + 左	★	
⑧ 越障运控	R2 + B	▲ L 街舞 (3m*3m)	L1 + 下	★	
L 踏步/站立	双击 START	★			
交互功能	按 键	I. ★ 代表短按一次生效, ▲ 代表长按2秒生效 II. 运控状态下长按5秒 ①, 设备进入阻尼保护状态 III. 躺倒开机: 开机-①-⑩-演示-⑥-关机 IV. 蹲姿开机: 开机-①-⑥-演示-⑥-关机 V. 座椅开机(推荐): 开机-①-②-③-演示-④-关机 Tips: ②-③过程需要人扶直站立 VI. 舞蹈或上肢动作时, 双击 START 可紧急中断舞蹈 VII. 括号内注明了舞蹈所需的活动空间			
L 握手	SELECT + A				★
L 高举挥手	SELECT + Y				★
L 胸前挥手	双击 Y				★
L 飞吻	双击 X				★
L 鼓掌	双击 A				★
语音模式切换	按 键				
常规/迎宾	R1 + R2 + Y	★			

Mode	Button	⑨ Dance Mode	R1 + B	▲
Zero Moment	L2 + Y	★ L Charleston dance 1 (→1m)	R1 +	★
① Damping	L2 + B	★ L Charleston dance 2 (↑1m, ←1m)	R1 +	★
② Locked Standing	L2 +	★ L Charleston dance 3 (↗3m)	R1 +	★
⑤ Lie -> Stand	L2 + X	★ L Popping3 (↑6m, ←3m)	R1 +	★
④ Seated Mode	L2 +	▲ L Jeet Kune Do (3m*3m)	R2 +	★
⑥ Squat <-> Stand	L2 + A	▲ L Twist (3m*3m)	R2 +	★
Adapt Rise	R1 + R2 + X	★ L Popping4 (↑4m, ←2m)	L1 + Y	★
Motion Control Switching	Button	L Ballet (\6m, →3m)	L1 + A	★
③ Running Mode	R2 + A	▲ L Folk Dance (\2m, →4m)	L1 + B	★
L Low/High Speed	R2 + (/)	★ L Groove (3m*3m)	L1 +	★
⑦ Regular Mode	R1 + X (1-DOF Waist) / Y (3-DOF Waist)	▲ L Popping5 (3m*3m)	L1 +	★
L Low/High Speed	Double Click L2 / L1	★ L WarmUp (3m*3m)	L1 +	★
⑧ Climb Mode	R2 + B	▲ L Hiphop (3m*3m)	L1 +	★
L Stepping/Standing	Double Click			
Interactonal	Button	I. ★ a single short press to activate ▲ a long press for 2 seconds to activate		
L Handshake	+ A	II. In motion control mode, long-pressing button ① for 5 seconds enter damping protection mode		
L Wave Hand	+ Y	III. Lie down and turn on: Turn On - ① - ⑩ - Demo - ⑥ - Turn off		
L Face Wave	Double Click Y	IV. Squat position turn on: Turn On - ① - ⑥ - Demo - ⑥ - Turn off		
L Right Kiss	Double Click X	V. Seat power on (recommended): Turn On - ① - ② - ③ - Demo - ④ - Turn off		
L Clap	Double Click A	Tips: ② and ③ require manual assistance to help the robot stand upright		
Switch to Voice Mode	Button	VI. Double Click to emergency-stop the dance during upper-body motions.		
Normal / Welcome	R1 + R2 + Y	VII. Parentheses show the required dance space		