

模式切换			按键			⑧ 格斗 R1 + A						▲
零力矩	L2 + Y	★	上肢	直拳	R1 +	★	腿部	前踢	R2 +	★	I. ★代表短按一次生效, ▲代表长按2秒生效 II. 运控状态下长按5秒①, 设备进入阻尼保护状态 III. 躺倒开机: 开机-①-⑩-演示-⑥-关机 IV. 蹲姿开机: 开机-①-⑥-演示-⑥-关机 V. 格斗开机: 开机-①-②-⑧-②-演示-关机 VI. 座椅开机(推荐): 开机-①-②-③-演示-④-关机 Tips: ② - ③过程需要人扶直站立	
① 阻尼	L2 + B	★		左勾拳	R1 +	★		左侧踢	R2 +	★		
② 锁定站立	L2 +	★		右勾拳	R1 +	★		右侧踢	R2 +	★		
⑤ 躺->站	L2 + X	★		上勾拳	R1 +	★		膝踢	R2 +	★		
④ 落座	L2 +	▲	闪避	原地旋转180°	双击	★	挑衅	预备	双击 Y	★		
⑥ 蹲<->站	L2 + A	▲		左闪避	双击	★		格挡	双击 X	★		
⑩ 自适应起身	R1 + R2 + X	★		右闪避	双击	★		你过来呀	双击 B	★		
运控切换	按键			后闪避	双击	★		拍屁股	双击 A	★		
⑦ 常规运控	R1 + Y	▲	姿态	躺->站	L2 +	★	姿态	站->躺	L2 +	★		
L 低速/高速	双击 L2 / L1	★	连招	连招1	L1 +	★						
③ 走跑运控	R2 + A	▲		连招2	L1 +	★						
L 左手贺胜	双击	★		连招3	L1 +	★						
L 右手贺胜	双击	★		连招4	L1 +	★						
L 双手贺胜	双击	★		连拳	R1 + SELECT	★						
L 释放	双击	★		冲撞	R2 + SELECT	★						

Mode	Button		Ⓢ Boxing			R1 + A			▲	
Zero Moment	L2 + Y	★	Upper Body	Straight Punch	R1 + ⬆️	★	Legs	Front Kick	R2 + ⬆️	★
① Damping	L2 + B	★		Left Hook	R1 + ⬅️	★		Left Side Kick	R2 + ⬅️	★
② Locked Standing	L2 + ⬆️	★		Right Hook	R1 + ➡️	★		Right Side Kick	R2 + ➡️	★
⑤ Lie -> Stand	L2 + X	★		Uppercut	R1 + ⬆️	★		Knee Kick	R2 + ⬆️	★
④ Seated Mode	L2 + ⬆️	▲	Evasion	Turn Around	Double Click ⬆️	★	Taunt	Ready Stance	Double Click Y	★
⑥ Squat <-> Stand	L2 + A	▲		Left Dodge	Double Click ⬅️	★		Block	Double Click X	★
⑩ Adapt Rise	R1 + R2 + X	★		Right Dodge	Double Click ➡️	★		Bring it on	Double Click B	★
Motion Control Switching	Button			Back Dodge	Double Click ⬆️	★		Slap Own Butt	Double Click A	★
⑦ Regular Mode	R1 + Y	▲	Stance	Lying-> Standing	L2 + ⬆️	★	Stance	Standing ->Lying	L2 + ⬆️	★
⌊ Low/High Speed	Double Click L2 / L1	★	Combo	Combo1	L1 + ⬆️	★	I. ★ a single short press to activate ▲ a long press for 2 seconds to activate II. In motion control mode, long-pressing button ① for 5 seconds enter damping protection mode III .Lie down and turn on: Turn On → ① → ② → Demo → ③ → Turn off IV. Squat position turn on: Turn On → ① → ② → Demo → ③ → Turn off V.Boxing turn on: Turn On → ① → ② → ③ → ④ → Demo → Turn off VI. Seat power on (recommended): Turn On → ① → ② → ③ → Demo → ④ → Turn off Tips: ② and ③ require manual assistance to help the robot stand upright			
③ Running Mode	R2 + A	▲		Combo2	L1 + ⬅️	★				
⌊ Left-hand Cheer	Double Click ⬅️	★		Combo3	L1 + ➡️	★				
⌊ Right-hand Cheer	Double Click ➡️	★		Combo4	L1 + ⬆️	★				
⌊ Both-hands Cheer	Double Click ⬆️	★		Combo Punch	R1 + SELECT	★				
⌊ Hands Release	Double Click ⬆️	★		Ram	R2 + SELECT	★				